


Model:
AWI-26HRDC1TB
Wiring Diagram

⚠ WARNING
 Please don't touch any terminal when the machine is running, stopping or has been powered off for less than 30 minutes to prevent the risk of electric shock!

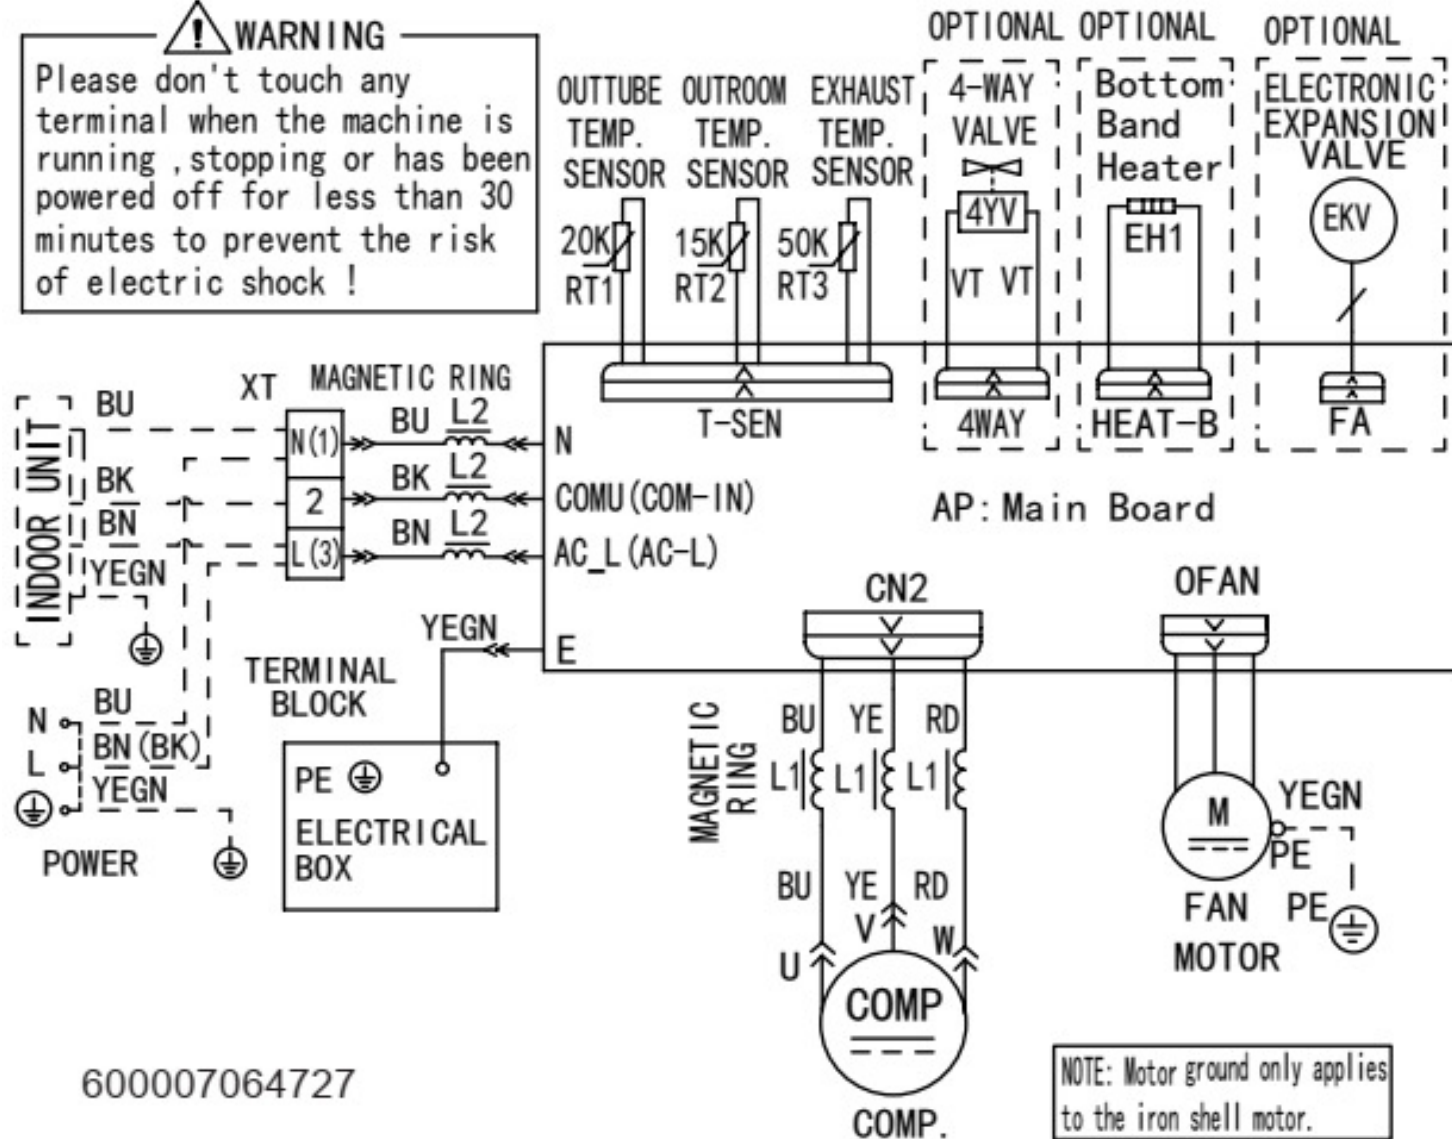

Model:	ALPICAIR
AWO-26HRDC1C	
Wiring Diagram	2